

## Battery Warning

### **BATTERY WARNING:**

#### **INTERNAL BURNS / CHOKING HAZARD**

Swallowing batteries may lead to serious injury or death (severe burns can occur within 2 hours).

#### **IMMEDIATELY SEE A DOCTOR**

#### **Emergency Telephone Numbers**

AUSTRALIA 000 NEW ZEALAND 111

#### **Poisons Information Centre**

AUSTRALIA 13 1126 NEW ZEALAND 0800 764 766

#### **KEEP BATTERIES OUT OF REACH OF CHILDREN**

*Dispose of batteries immediately and responsibly*

- Non-rechargeable batteries are not to be recharged.
- Only batteries of the same or equivalent type are to be used.
- Batteries are to be inserted with the correct polarity.
- Remove exhausted batteries from the product.
- Remove batteries from the battery compartment when not in use.
- Never throw batteries in a fire or attempt to open up their outer casing.

## Specifications

Capacity: 2000g (2kg) / 70.55oz

Graduation: 1g / 0.05oz

Tare weigh function

Detachable 4mm thick tempered glass, platform

Automatic / Manual 'Off' functions

Automatic zero setting

Overload and low battery indicators

Battery: 2 x AA alkaline batteries (not included)

**MCGLOINS** supertex

ABN 40 000 028 688

W: [www.mcglains-supertex.com.au](http://www.mcglains-supertex.com.au)

E: [info@mstx.com.au](mailto:info@mstx.com.au)

T: +61 (0) 2 9836 1000

F: +61 (0) 2 9836 1055

Made in China



A signatory to the  
Australian Packaging Covenant



PLEASE DISPOSE  
OF PACKAGING  
RESPONSIBLY



RECYCLABLE  
CARDBOARD

**proPERT**<sup>®</sup>  
2kg glass top  
digital  
kitchen scale

*In your home since 1920*

Style: 1085

Name: Classic




**Operating Instructions**

## Instructions for use


Before first use, remove all packaging including the clear protective film from the black control panel.

Retain this sheet for future reference.

### FUNCTION KEYS

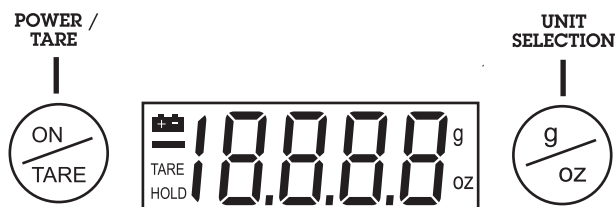

1. Purchase two AA (1.5V) alkaline batteries. After removing the battery compartment cover on the bottom of the scale, insert the batteries, making sure the positive (+) and negative (-) terminals are correctly positioned. Replace the battery compartment cover.

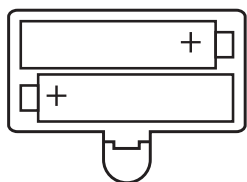

2. Place the scale on a hard, level surface. If you intend using a bowl or container, place it on the platform first before switching it on.
3. To turn the scale on, press 'ON/TARE'.
4. The full display appears for about 1 second before it 'zeroes' indicating it is now ready for use.
5. Press the 'g/oz' button to toggle between grams and ounces at any time.

6. Place the object or ingredients directly onto the platform, or in the bowl or container placed securely on the platform. Ensure the scale readout shows zero before weighing, otherwise, press 'ON/TARE' to reset it.

### To use the tare weighing function

This scale allows the separate weighing of items as they are added onto the scale. No need to empty the bowl or container!

1. After weighing the first item on the scale and with this first item still on the scale, press 'ON/TARE' to reset the display to zero. 'Tare' appears to the left of the screen confirming this mode.
2. Add the second item to the scale. The scale will now display the weight of the second item only.
3. If you have additional items to weigh, repeat Steps 1 and 2. The total weight of all the items on the scale (including the bowl or container if using one) must not exceed the capacity of the scale, which is 2000g / 70.55oz
4. The total weight of the items on the scale (including the container or bowl if using one) can be obtained by first pressing 'ON/TARE', then removing all items off the scale. The total weight will be displayed as a negative figure.

### To turn the scale off

Turn the scale off anytime by holding down 'ON/TARE' for approximately 3 seconds. Otherwise, if left idle, the scale switches off automatically after about 60 seconds. This helps prolong battery life.

### Overloading

If the scale is overloaded, 'EEEE' will be displayed. Remove the weight immediately or damage to the scale may occur.

### Low battery indicator

When the batteries need changing, "Lo" will be displayed on the readout. Replace the batteries with good quality, fresh, alkaline ones ensuring they are not faulty before use.

### Caring for your Scale

Wipe the scale with a damp cloth, but do not allow water to get inside the scale.

To clean the glass top, detach it first by unscrewing (hold the scale with one hand and with the other, grip the glasstop and turn it counterclockwise)

Do not use a corrosive cleaner.

The scale is not waterproof. Do not immerse directly into water.

Do not attempt to dismantle the scale. It does not contain parts that may be repaired by the user.

Do not subject the scale to extreme temperatures.

Remove the batteries if the scale is not being used for a long period of time.