

Specifications

Model 1209

Weighs in grams (g) or pounds and ounces (lb oz)

Capacity: 5,000g (5kg) or 11lbs

Graduation: 1g or 1/8 oz

Uses Strain Gauge technology, which is an electrical resistance or 'strain' measured by a steel bar within the scale, being depressed by the weight of the food on the scale. This 'strain' is then converted to a digital weight readout.

Bowl: 3 Litre capacity. Dishwasher-safe, but not suitable for use in the microwave

Automatic zero setting

Automatic switch off

Overload indicator 'E'

Low battery indicator

Tare Function

Electronic 99 minute, countdown timer with alarm

Battery: 1 x CR2032 Lithium battery

Caring for your Scale

Clean the scale with a damp, soft cloth using a mild detergent or non-abrasive household cleaner, but do not allow water to get inside the scale as this could damage the electronics.

Remove the battery if the scale is not being used for a long period of time.

*Check our Website for the full range -
www.propert.com.au*



Propert stocks a range of items including

Bathroom Scales

- Body Fat, Water, Bone, Muscle mass with recommended daily calorie intake; Electronic and Mechanical

Kitchen Scales

- Nutrition, Electronic and Mechanical

Kitchenware

- Tongs, Peelers, Can and Bottle Openers, Egg beaters, Sifters, Sink Strainers, Rolling Pins, Knives Graters and other kitchen gadgets

The Guarantee

With our longstanding tradition of providing quality scales, we have no hesitation in offering you a one (1) year guarantee of this product against defective materials or workmanship.

If you wish to claim under this guarantee, please return the scale to the store from which you purchased it, together with proof of purchase. Please retain this sheet with your proof of purchase.

This guarantee is in addition to any mandatory conditions, warranties and guarantees under any Commonwealth or State Act.

For further information -

Website: www.propert.com.au

Email: enquiries@propert.com.au

Telephone (02) 9634 3400

Facsimile (02) 9899 2126

Made in PRC

Propert[®]

ELECTRONIC KITCHEN BOWL SCALE

with Countdown Timer

Model 1209

Operating Instructions


INSTRUCTIONS FOR USE

For the purpose of properly using the scale, please read the instructions carefully before operating.

Note: The insulator tab found underneath the battery in the battery compartment must first be removed for the scale to function.

Weighing

1. Place the scale on a hard, level surface. If you intend using a bowl, place it on the platform first before turning the scale on.
2. The scale displays in grams (g) or pounds (lb). To select the unit measure, adjust the switch underneath the scale before turning it on.



3. Press the 'ON/TIMER' button to enter weighing mode. The scale is ready for use when '0' appears.
4. Put the item to be weighed in the bowl or on the platform - the weight will appear on the display
5. If no further weighing is carried out within the next minute and a half, the scale automatically turns off.

To use the Tare function

This scale allows the separate weighing of items as each item is added to the scale. No need to empty your bowl.

After weighing the first item, press the 'TARE' button to reset the display to zero.

With the first item still on the platform or in a bowl or container, add the second item. The readout will now show the weight of the second item only. Repeat these steps if you have additional items to weigh. The total combined weight of the items must not exceed the capacity of the scale, which is 5000g / 11lb.

The total weight of the items on the scale, (including the container or bowl if using one), can be obtained by pressing the 'TARE' button again and then removing all items off the scale. The total weight will be displayed as a minus figure.

Countdown timer setting

1. Press the 'ON/TIMER' button to enter weighing mode. The scale is ready for use when '0' appears.
2. To set the countdown timer, press 'ON/TIMER' once again. You are in 'countdown setting' mode when '00:00' is displayed.
3. Press the up or down arrows to set the number of minutes required. Maximum time span: 99 minutes only.
4. Once done, press the 'ON/TIMER' button again to move from 'minutes' to 'seconds'. Use the up or down arrows to set the number of seconds required.
5. When this is done, press 'ON/TIMER' once again to activate countdown.
6. The alarm sounds off when countdown reaches zero. To silence the alarm, press the 'ON/TIMER' button.
7. You may resume weighing whilst countdown is taking place, by pressing 'ON/TIMER' again. This will take you back to weighing mode.

Note that once countdown time has been set, you cannot change it.

If necessary, remove the battery momentarily and re-install. Then reset the Timer.

Overloading


When the scale is overloaded (+5000g/11lbs), the display will read 'E'. Remove the weight immediately or damage to the scale may occur.

Low battery indicator

'Lo' appears on the readout indicating the battery needs to be replaced. Always use a good quality, fresh Lithium battery.

How to remove and insert the battery

1. Turn the scale upside down and slide the battery compartment cover open.
2. After removing the spent battery, insert 1 fresh, new CR2032 lithium battery with the '+' side facing up. Then securely replace the compartment cover.

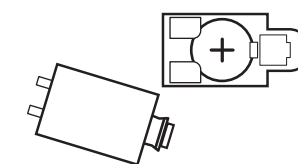

WARNING ABOUT BATTERIES

- KEEP OUT OF REACH OF CHILDREN.
- Batteries are harmful if swallowed.
- The battery is to be inserted with the correct polarity.
- Remove the battery from the battery compartment when not in use for long periods.
- Never throw batteries in a fire or attempt to open up their outer casing.
- Dispose of old batteries responsibly.